










## Battery Tray Application Guide

November 1st 2013

E.& O.E.





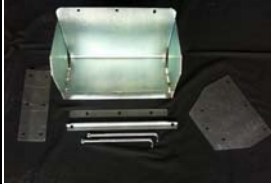
			Part No.	
FORD	RANGER GEN1 (MANUAL ONLY) - Fits under bonnet left-hand front skit. Only fits MANUAL models without ECU unit on LHF skirt. You need to remove horn from LHF Skirt & relocate to radiator support.	2007-2011	<b>BT023</b>	
FORD	RANGER GEN2 TUB MOUNT	2011-ON	<b>BT025A</b>	
HOLDEN	COLORADO - Fits to the chassis underneath the cab on the Drivers Side. Hangs down approx. 50mm but no lower than the Cross Member.	2007-2011	<b>BT013</b>	
HOLDEN	COLORADO TUB MOUNT	2007-ON	<b>BT025B</b>	
HOLDEN	RODEO - Fits to the chassis underneath the cab on the Drivers Side. Hangs down approx. 50mm but no lower than the Cross Member.	2007-2011	<b>BT013</b>	
HOLDEN	RODEO TUB MOUNT	2007-ON	<b>BT025B</b>	
ISUZU	DMAX - Fits to the chassis underneath the cab on the Drivers Side. Hangs down approx. 50mm but no lower than the Cross Member.	2007-2011	<b>BT013</b>	
ISUZU	DMAX TUB MOUNT	2007-ON	<b>BT025B</b>	



## Battery Tray Application Guide

November 1st 2013

E.& O.E.


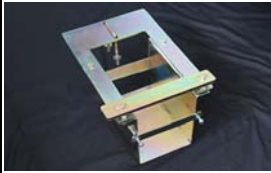



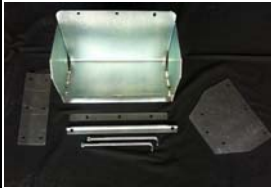
			Part No.	
MAZDA	BT-50 GEN1 (MANUAL ONLY) - Fits under bonnet left-hand front skirt. Only fits MANUAL models without ECU unit on LHF skirt. You need to remove horn from LHF Skirt & relocate to radiator support.	2007-2011	<b>BT023</b>	
MAZDA	BT-50 GEN2 TUB MOUNT	2011-ON	<b>BT025C</b>	
MITSUBISHI	TRITON 2007-2013 - when fitting this battery tray the most efficient way is to use the n50 ZZ (10 inc case) size battery for your starting battery this battery is best to the rear of tray against fire wall and the n70 ZZ (12 inc case) size for auxiliary to do this you need pull the earth cable out of the plastic conduit then re tape conduit re-root earth cable back to fire wall of the vehicle and around back of new tray there is plenty of cable using new bolt (supplied) and fix earth cable to the skirt through tag on new tray.		<b>BT016</b>	
MITSUBISHI	PAJERO (DIESEL ONLY)	2010-2013	<b>BT026</b>	
MULTIFIT	MULTI FIT BATTERY BOX (UNDER TRAY). FITTING AREA UNDER THE TRAY 445mmX175mmX320mm. WILL FIT UP TO 330mm LONG BATTERY 120Ah.		<b>BT039</b>	
MULTIFIT	MULTI FIT BATTERY BOX (TRAY MOUNT) - MULTI-FIT BATTERY TRAY FOR FITMENT UNDER UTE TRAYS ETC. (TOP FITMENT AREA UNDER TRAY REQUIRED IS 320MM WIDE X 335MM LONG) HANGS DOWN 250MM.		<b>BT008A</b>	
MULTIFIT	MULTI FIT BATTERY BOX (TUB MOUNT). SITS ON TOP ON THE WHEEL ARCH INSIDE THE TUB (WILL NOT FIT SOME VEHICLES WITH TUB LINERS INSTALLED).		<b>BT025</b>	
BT025KITA	FORD RANGER 2011-ON FIT KIT ONLY FOR BT025 TRAY		BT025KITA	
BT025KITB	COLORADO/DMAX 2007-ON FIT KIT ONLY FOR BT025 TRAY		BT025KITB	
BT025KITC	MAZDA BT50 2011-ON FIT KIT ONLY FOR BT025 TRAY		BT025KITC	
BT025KITD	HILUX SR5 2005-ON FIT KIT ONLY FOR BT025 TRAY		BT025KITD	



## Battery Tray Application Guide

November 1st 2013

E.& O.E.

		<b>Part No.</b>		
BT025KITE	AMAROK 2009-ON FIT KIT ONLY FOR BT025 TRAY		BT025KITE	
BT025KITF	NAVARA D40 2005-ON FIT KIT ONLY TO SUIT BT025 TRAY		BT025KITF	
NISSAN	NAVARA D40 ST - please note year! (Battery Tray will be located on the passenger side of the vehicle, underneath the tub, slightly in front of the diff). Will only suit for vehicle with TUB - Not Tray. Will not suit for TRAY setup.	2001-2012	<b>BT008</b>	
NISSAN	NAVARA D40 ST - Made in Spain, so require the ST-X Style. (Battery Tray will be located on the passenger side of the vehicle, underneath the tub, slightly in front of the diff). Will only suit for vehicle with TUB - Not Tray. Will not suit for TRAY setup.	2012-2013	<b>BT007</b>	
NISSAN	NAVARA D40 ST-X (Battery Tray will be located on the passenger side of the vehicle, underneath the tub, slightly in front of the diff). Will only suit for vehicle with TUB - Not Tray. Will not suit for TRAY setup.	2005-2013	<b>BT007</b>	
NISSAN	NAVARA D40 TUB MOUNT	2005-2013	<b>BT025F</b>	
NISSAN	PATROL GU 3.0L-4.2L DIESEL ST - Please make sure there are no relays or aftermarket fuel fitters in the way prior to fitment. Must include Guard Support. Failure to install with guard support will result in cracking of the guard inner.	1998-2013	<b>BT037</b>	
TOYOTA	HILUX 2005-2013 - fits Diesel & Petrol, 4x4, single cab, space cab & dual cab and workmate 4x2 models. Fits N70ZZ (12 inc case) size battery. Dual trays that fit under the bonnet on this model require the module to be relocated from firewall, our product has the bolt pattern for the module to be fixed to the side without any re-wiring or drilling.		<b>BT004</b>	
TOYOTA	HILUX SR5 TUB MOUNT	2005-2013	<b>BT025D</b>	



## Battery Tray Application Guide

November 1st 2013

E.& O.E.

			Part No.	
TOYOTA	PRADO 120 3.0l Turbo Diesel 4x4 LWD & SWB	2003-2011	<b>BT014</b>	
TOYOTA	PRADO 150 (INCL TURBO DIESEL) - requires relocation of the air-con bracket to battery tray	2010-2013	<b>BT009</b>	
TOYOTA	LANDCRUISER 76 SERIES VDJ V8 MODEL (4D WAGON) Installation requires drilling holes in LHF Skirt.	2007-2013	<b>BT019</b>	
TOYOTA	LANDCRUISER 78 SERIES (TROOPIE) (EXCL WAGON) Installation requires drilling holes in LHF Skirt.	2007-2013	<b>BT019</b>	
TOYOTA	LANDCRUISER 79 SERIES (UTE) (EXCL WAGON) Installation requires drilling holes in LHF Skirt.	2007-2013	<b>BT019</b>	
VW	AMAROK TUB MOUNT	2009-ON	<b>BT025E</b>	

**Most Trays fit a N70 ZZ (12 inch case) size battery**